

Installation Manual

Fuel Rail Kit VE-VF LS2/LS3/L76/L77/L92 PFEFRKLS2BK



Included Items	QTY
PFEFRKLS2BK Billet Fuel Rails	2
PFEFRKLS2BK Mounting Bracket & Screws	4
PFE920-08BK -08AN ORB Fitting To -08AN Male	4
PFE814-08BK -08AN ORB Plug	2

<u>WARNING</u>: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. PROFLOW WILL NOT BE RESPONSIBLE FOR ANY DAMAGE AS A RESULT OF THE INCORRECT INSTALLATION OF THIS PRODUCT. IT IS RECOMMENDED THAT A QUALIFIED AUTOMOTIVE TECHNICIAN PERFORMS THIS INSTALLATION.

<u>WARNING:</u> THE INSTALLATION OF THIS PRODUCT REQUIRES THE HANDLING OF FUEL. IT IS RECOMMENDED TO WORK IN A WELL-VENTILATED AREA AND WEAR APPROPRIATE PERSONAL PROTECTION. KEEP ALL IGNITION SOURCES AND FLAMES AWAY FROM THE VEHICLE AT ALL TIMES.



EMAIL: sales@proflow.com.au PHONE: 1300 879 879

Typical Installation

- 1. Disconnect the negative battery terminal and the 8 fuel injectors. Note that the wiring harness is specific to firing order so they must be reinstalled to the correct injector.
- 2. Disconnect the feed and return lines, any wiring, vacuum lines and throttle body components that may interfere with the installation process.
- Refer to the factory service manual and disassemble the factory fuel rail from the manifold. To relieve fuel pressure, disconnect the fuel pump connector and turn the vehicle on and allow the engine to stall. Turn ignition off and allow engine to cool before proceeding.
- 4. Ensure the mounting brackets are installed to the fuel rail and are tightened with the included screws and lock washers
- 5. Install any necessary adapter fittings (4x -08AN fittings included) into each fuel rail end port. Ensure to lubricate the o-rings prior to installation.
- 6. Install the 2x -08AN ORB plugs in the centres of both fuel rails unless using one port as a fuel return.
- 7. Clean out any dirt and debris found in the intake manifold injector seat bores before proceeding.
- 8. Install the injectors into the intake manifold ports with a coat of oil applied to the orings to avoid damaging them.
- Align each fuel rail assembly above the injectors on the manifold and press down firmly until the injectors slide into the fuel rail ports (Proflow logo facing outwards). Ensure all o-rings are lubricated prior.
- 10. Confirm that all injectors have been installed properly and rotate them so their wiring plug's are accessible.
- 11. Secure both rails onto the manifold by utilizing the 4 factory mounting screws (or other M6 screws) and tighten to 8 Nm.
- 12. Connect any other fuel plumbing accessories and hoses to the fuel rails. You will have to modify the factory fuel lines and fuel pressure regulator in order to correctly plumb your fuel system. If you are unsure on how to do this, please contact us.
- 13. Reinstall all components and wiring previously removed with reference to the factory service manual and cycle the key a few times without starting the engine. This will prime the fuel pump prior to starting the vehicle.
- 14. If no leaks are found, start the engine and check again for leaks while the engine is running.

Note: OEM fuel pressure is approximately 55-60 PSI (as stated by GM).



EMAIL: sales@proflow.com.au PHONE: 1300 879 879