

Installation Manual

Fuel Rail Kit Nissan RB25DET Top Feed PFEFRKRB25BK



Included Items	QTY
PFEFRKRB25BK Billet Fuel Rail	1
PFEFRKRB25BK Mounting Brackets, Spacers & Screws	2
PFEFRKRB25BK Manifold Injector Seat	6
PFE920-08BK -08AN ORB Fitting To -08AN Male	2
PFE920-06-08BK -08AN ORB Fitting To -06AN Male	2
PFE814-06BK -06AN ORB Plug	1
PFE887BK Short Injector Adapter	6

WARNING: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. PROFLOW WILL NOT BE RESPONSIBLE FOR ANY DAMAGE AS A RESULT OF THE INCORRECT INSTALLATION OF THIS PRODUCT. IT IS RECOMMENDED THAT A QUALIFIED AUTOMOTIVE TECHNICIAN PERFORMS THIS INSTALLATION.

WARNING: THE INSTALLATION OF THIS PRODUCT REQUIRES THE HANDLING OF FUEL. IT IS RECOMMENDED TO WORK IN A WELL-VENTILATED AREA AND WEAR APPROPRIATE PERSONAL PROTECTION. KEEP ALL IGNITION SOURCES AND FLAMES AWAY FROM THE VEHICLE AT ALL TIMES.



EMAIL: sales@proflow.com.au PHONE: 1300 879 879

Typical Installation

- 1. Disconnect the negative battery terminal and the 6 fuel injectors wiring plugs.
- 2. Disconnect the feed and return lines, any wiring, vacuum lines and throttle body components that may interfere with the installation process.
- 3. Refer to the factory service manual and disassemble the factory fuel rail from the manifold.
- 4. To relieve fuel pressure, disconnect the fuel pump connector and turn the vehicle on and allow the engine to stall. Turn ignition off and allow engine to cool before proceeding.
- 5. Install the 2x mounting brackets to the fuel rail using the supplied countersunk head screws. Apply a low strength thread locker to these screws.
- 6. Install any necessary adapter fittings (4x -08AN fittings included) into the fuel rail end ports. If you are using the top -06AN port as a return, block the end port off with the appropriate o-ring plug fitting (not supplied). Ensure to lubricate the o-rings prior to installation.
- 7. If you are using all ends ports, block the top -06AN port with the supplied plug.
- 8. Clean out any debris found in the intake manifold injector seat bores and press the supplied injector seats down firmly into the intake manifold. Apply a light coat of lubricant to the o-rings before doing so.
- 9. Install the injectors into the seats on the manifold with a coat of oil applied to the orings to avoid damaging them.
- 10. If you are using short length injectors, insert the 6x supplied short injector adapters into the fuel rail injector ports. If using a 3/4 length injector, please skip this step.
- 11. Insert the supplied M8x40mm screws into the 2x mounting brackets with the supplied spring washers and place the 2x supplied spacers underneath the brackets.
- 12. Align the fuel rail assembly above the injectors on the manifold and press down firmly until the injectors slide into the fuel rail ports. Ensure all o-rings are lubricated prior.
- 13. Confirm that all injectors have been installed properly and rotate them so their wiring plug's are accessible.
- 14. Secure the fuel rail by fastening the supplied M8 socket head cap screws with spring washers.
- 15. Connect any other fuel plumbing accessories and hoses to the fuel rails. You will have to modify the factory fuel lines and fuel pressure regulator in order to correctly plumb your fuel system. If you are unsure on how to do this, please contact us.
- 16. Reinstall all components and wiring previously removed with reference to the factory service manual and cycle the key a few times without starting the engine. This will prime the fuel pump prior to starting the vehicle.
- 17. If no leaks are found, start the engine and check again for leaks while the engine is running. Once a final inspection is done, the installation is complete.

PROFLOW.COM.AU PROFLOW LIMITED WARRANTY

EMAIL: sales@proflow.com.au

PHONE: 1300 879 879

This Proflow product is warranted to be free from defects in materials and workmanship for a period of one year from the original date of purchase. No warranty claim will be valid without authentic, dated proof of purchase. This warranty is to the original retail purchaser and none other and is available directly from Proflow and not through any point of distribution or purchase.