


PROFLOW

Hose Installation Kit Instructions

PFEHIK - Hose Installation Kit




Step 1

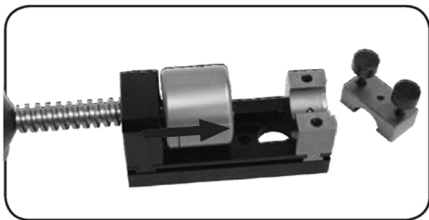


Release the hose clamp assembly by releasing the thumbscrews. Slide the socket nut holder open.

Step 2

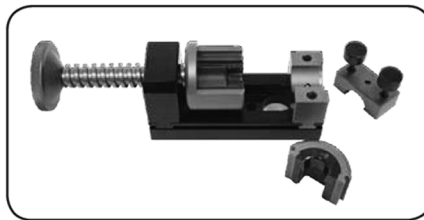


Slide the cover back and slide the socket nut insert into the tool and the hose clamp inserts into the holder.

Step 3

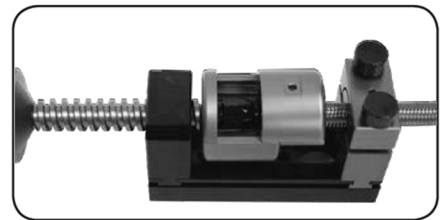


Place the socket nut into the tool holder and the hose into the hose clamp. Place the nut into the nut clamping mechanism and slide the cover closed.

Step 4

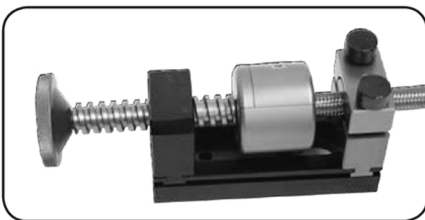


Place the stainless steel braided hose into the hose clamping mechanism and tighten the two screws to hold it in place.

Step 5

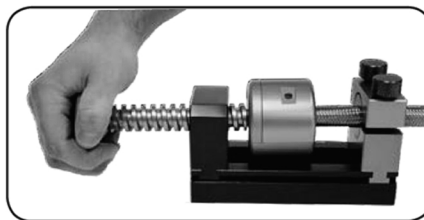


With the cover closed and the hose held in place begin rotating the wheel until it cannot rotate any further. Measure depth of nut to prevent overthreading.

Step 6

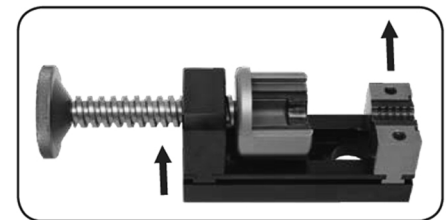


To transform the Proflow Hose Installation Kit from an installation tool to a vice simply slide the hose clamp and handwheel assembly off the base.

Step 7

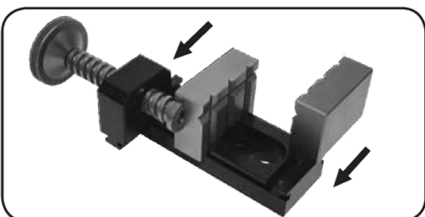

Unscrew the socket nut holder and screw on the vice adaptor.

Step 8

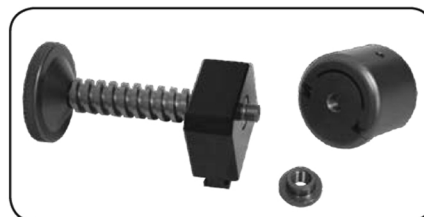

Slide the two vice-jaw pieces onto the base of the assembly. Slide the handwheel assembly out and slide back into the groove of the vice piece.

